

Talk No. 10

Start time End

Duration

her employees.

1. Introduction:

1.1 Mobile tower scaffo numerous tasks wh means of serious in

2. Main Points:

- Plan use of mob manufacturer's guid available to erect, a
- 2.2 Check all mobile to brakes/locking devi bracings are in pla platform.
- 2.3 Where height excelloboards must be fitted that they be fitted re

3. Points to remember

- 3.1 Check manufacture height should not narrowest base wid can be extended by
- Mobile tower scaffo soft or not level th provided.
- 3.3 Wheels should be lo
- 3.4 Only integral ladde outside, or use ladd
- 3.5 Ensure all persons prior to moving, r surfaces, and bewa
- 3.6 Mobile tower platfo must be a minimum
- 3.7 Consider tying the t

sure SWL's are sufficient, that , and that a competent person is

and efficient working platform for

misused, however, they provide a

e; check general condition, check free rotation of wheels, check all le access/egress and for suitable

intermediate guard-rails and toeum requirement — recommended

ght ratio. General rule is that the narrowest base width, ie where nould not exceed 4.5m. (Note: this

on level, firm surfaces. If surface is used where adequate support is


r is in use.

n no account rest ladders against atforms.

oved from mobile tower scaffolds ne base, avoid potholes/uneven ns — especially power lines!

rded out where practicable. This

applicable.

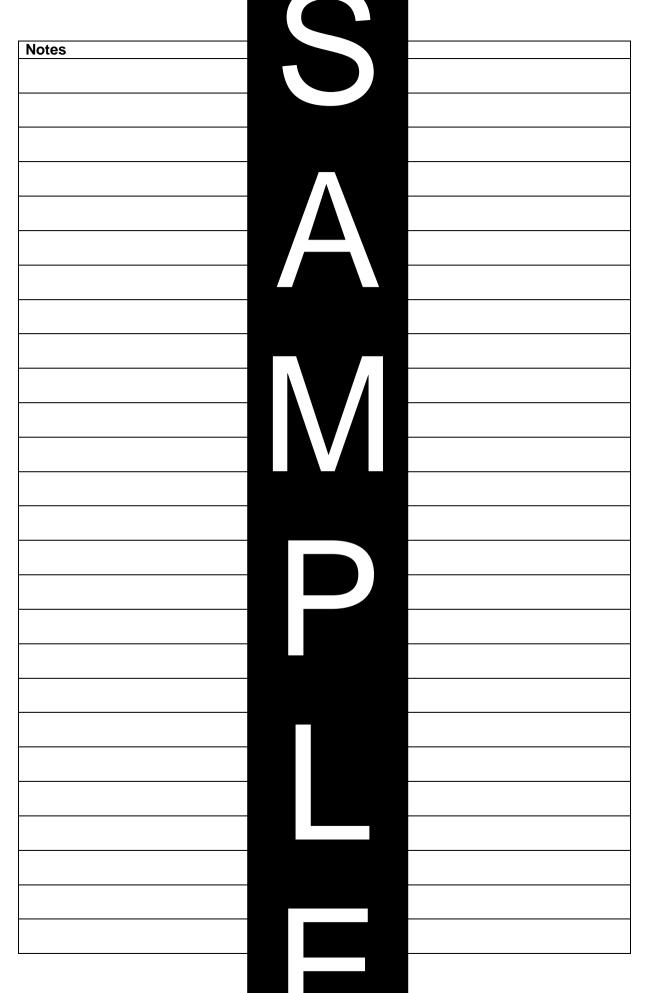

ATTEN SHEET

	ALIEN	SHEET	
Talk No. 10		owers	
All operatives listed ar		Box Talk.	
Date			
NAME			